



# Users Guide

SP-SW1900-HD



---

# Contents


<b>Contents</b> .....	<b>3</b>
<b>Introduction</b> .....	<b>4</b>
<b>Introducing the SP-SW1900-HD (SW1900-HD) - 5 X 1 HDMI Auto-Switcher with Integrated Audio Mixer, Injector, &amp; Stereo Output</b> .....	<b>4</b>
<b>Getting to Know the SP-SW1900-HD</b> .....	<b>4</b>
Front View .....	4
Back View .....	4
<b>Installation</b> .....	<b>5</b>
<b>Connecting Input Devices</b> .....	<b>5</b>
Compatible Input Devices .....	5
HDMI Extenders.....	5
<b>Connecting the Display</b> .....	<b>6</b>
Compatible Displays .....	6
Image Resolutions .....	6
<b>Stereo Audio (Line) Input</b> .....	<b>6</b>
<b>Stereo Audio Output</b> .....	<b>6</b>
<b>RS-232 Communication Interface</b> .....	<b>7</b>
RS-232 Port Pinout .....	7
RS-232 Communication Settings .....	7
<b>Power</b> .....	<b>7</b>
<b>Basic Operation</b> .....	<b>8</b>
<b>Auto-Sense, Auto-Switching</b> .....	<b>8</b>
<b>Automatic Display On/Off</b> .....	<b>8</b>
<b>Changes to the SP-SW1900-HD</b> .....	<b>10</b>
<b>RS232/DB9 Cable Pin-Out</b> .....	<b>10</b>
<b>Making a Switch / Selecting an Input to Display</b> .....	<b>11</b>
<b>Adjust Volume</b> .....	<b>11</b>
<b>Input Device Gain Adjustments</b> .....	<b>11</b>
<b>Audio Line Input Mix</b> .....	<b>12</b>
<b>Change Display Resolution</b> .....	<b>12</b>
EDID Table Settings .....	13
<b>Auto-Switch On / Off</b> .....	<b>13</b>
<b>Display Control</b> .....	<b>14</b>
<b>Display On / Off</b> .....	<b>14</b>
<b>Freerun On / Off</b> .....	<b>14</b>

# Introduction

## Introducing the SP-SW1900-HD (SW1900-HD) 5 X 1 HDMI Auto-Switcher with Integrated Audio Mixer, Injector, & Stereo Output

The SW1900-HD allows 5 HDMI sources to share one display or projector with resolutions up to UHDTV (3840x2160). The 3.5mm stereo input port allows line-level microphone or mobile device to be mixed with audio extracted from the selected HDMI input then re-injected into the HDMI stream. An RCA stereo output provides a pre-amplified output for local speakers if the volume from the display is inadequate or if ADA assisted listening equipment is required. The system's auto-sense, auto-switch feature combined with the automatic integrated display power on and off makes this solution extremely easy to use. For installs that require SP Controls, or other 3rd party control systems, an RS-232 connector is provided for power, source selection, and volume control.

### Getting to Know the SW1900-HD

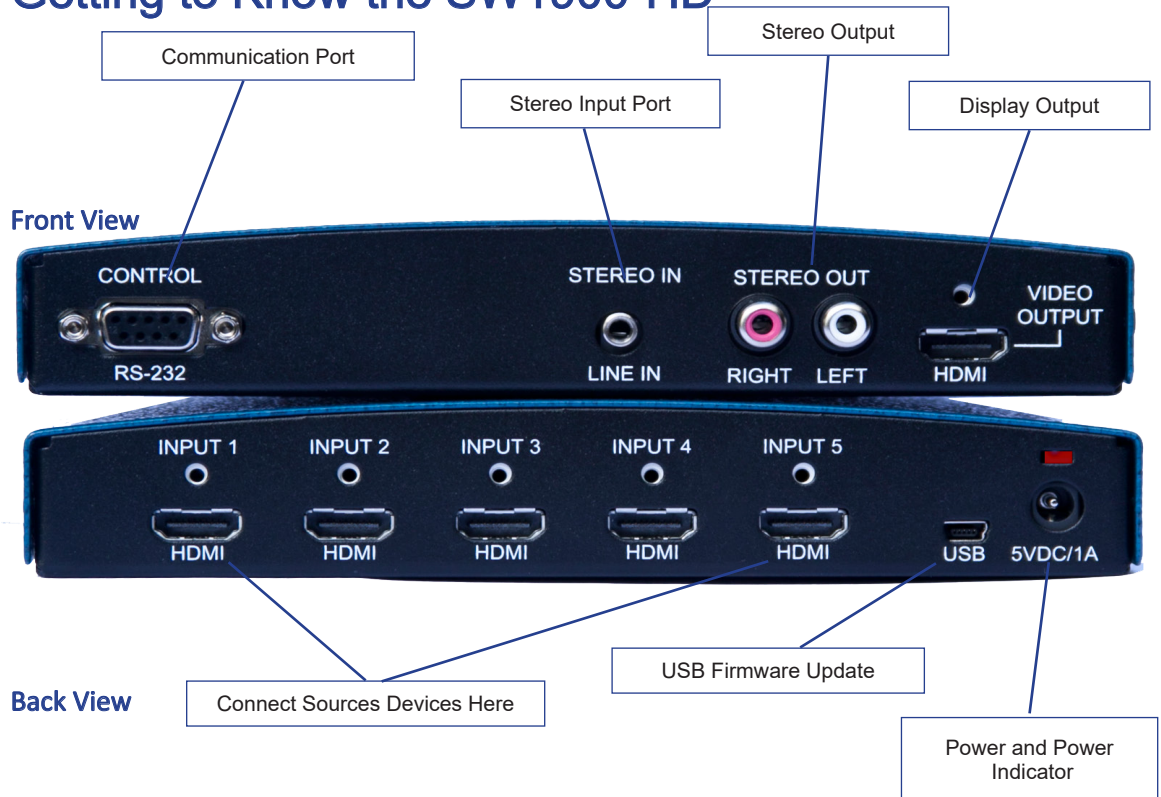

---

# Installation

## Connecting Input Devices

Input or source devices are connected on the back side of the SW1900-HD using the HDMI connectors labeled “Input 1” through “Input 5”. See image call-out on Page 4 of this manual.

### Compatible Input Devices

SW1900-HD compatible devices must support the HDMI signal format. These physical devices may be any of the following:

- A native HDMI device
- A DVI-D or DVI-I device using a DVI to HDMI cable
- A DisplayPort device using a DisplayPort to HDMI cable
- A MDL mobile device using a MDL to HDMI cable

### HDMI Extenders

The input may also be indirectly connected using an HDMI extender. By default, the SW1900-HD keeps its display information (EDID) local to each input. There is very little delay from the time an input device asks for the display information to the time the information is sent. A device connected to an extender may “time-out” waiting for a response from the display device. If a time-out occurs, the input device will not send its content. It is important to use high quality extenders so any delay caused by the extender technology is minimized and time-outs are less likely to occur.

The SW1900-HD has a “pass through” mode that passes all display information requests directly to the display. If this feature is enabled and the system is configured with extenders on the input and output ports of the SW1900-HD it is possible to have time-outs on certain input devices.

## Connecting the Display

Displays (or other output devices) are connected on front side of the SW1900-HD on the HDMI connector labeled “Video Output”. See image call-out on Page 4 of this manual.

### Compatible Displays

SW1900-HD is compatible with native HDMI, DVI, or DisplayPort displays.


### Image Resolutions

The SW1900-HD supports resolutions up to UHD TV (3840 x 2160 @ 30Hz [4:2:2] or 60Hz [4:2:0]), all HDTV resolutions, and VESA monitor resolutions up to 1920 x 1200.

## Stereo Audio (Line) Input

Connect the audio from a mobile device or wireless microphone system (line level) to the 3.5mm stereo jack of the SW1900-HD. See image call-out on Page 4, “Stereo In”.

The audio from this connector is automatically mixed and sent to the HDMI display and stereo output. Gain adjustments are available through the RS-232 interface.

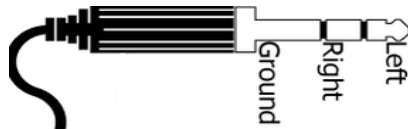


## Stereo Audio Output

If external speakers are required, connect an RCA cable from the SW1900-HD “Stereo Out” connectors to your amplifier or powered speakers. See image call-out on Page 4, “Stereo In”.

The stereo output is a mix of program audio (audio extracted from the selected HDMI input) and stereo audio line input (3.5mm jack). The default mix and level should be adequate for most installations. However, gain and volume level adjustments are available through the RS-232 interface.

## RS-232 Communication Interface

The SW1900-HD uses an RS-232 serial interface to change attributes and behavior of the SW1900-HD. The communication parameters are as follows: 115200 baud, 8 bit, no parity, and 1 stop bit. The baud rate is adjustable. Pins 2 (Rx), 3 (Tx), and 5 (GND) are used.

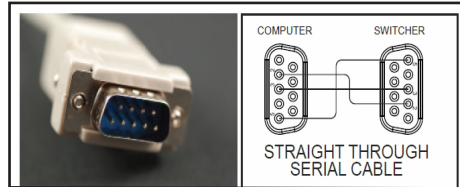

RS-232 Port Pinout	
Computer	SP-SW1900-HD
Pin 2	Pin 2
Pin 3	Pin 3
Pin 5	Pin 5

RS-232 Communication Settings	
Baud Rate	115,200 Adjustable
Packet Size	8 Bit
Parity	None
Stop Bit	1



See Page 10 for more detailed discussions on RS-232 commands and/or review the [\*SW1900-HD Programmers Guide\*](#).

## Power

Using the AC to DC power supply shipped with the SW1900-HD, connect the round connector to the SW1900-HD. The Power Indicator LED will illuminate above of the DC/5V location to indicate that power is being received.

---

# Basic Operation

In most situations, the SW1900-HD performs exceptionally right out of the box. Simply hook up the input devices and display in any order, power up the system. The SW1900-HD will begin in an auto-sense, auto-switching mode with audio output and display control enabled. Keep in mind that features can be turned on and off using the RS-232 interface. See Page 10 for more information.

Two key features of the SW1900-HD are related to automation: auto-switching and display management.

## Auto-Sense, Auto-Switching

Auto-sense, automatic switching (ASW) is a very powerful feature of the SW1900-HD and will be explained further to best understand how it can be utilized. ASW is enabled by default and can be disabled using the RS-232 interface.

The SW1900-HD is very sensitive. When a user connects a device to one of the 5 HDMI input ports, the SW1900-HD responds immediately by routing the video from the newly connected device to the display. If the color space is different than the display, color is automatically converted internally to ensure the highest quality image is displayed at the highest resolution practicable.

If another person connects a computer or mobile device to an HDMI input port, that device will immediately appear on the display. The rule is: The last to connect will always appear on the display.

Should an actively displayed device be disconnected, the SW1900-HD will search from input 1 through input 5 for the first active signal. Once found, the image from that device will appear on the display. From a design standpoint, consider having the home room computer on input 1 and any ancillary or guest connections on inputs 2 through 5.

## Automatic Display On/Off

Automatic display on/off (CEC) is another powerful feature of the SW1900-HD. CEC is enabled by default but can be disabled using the RS-232 interface.

CEC must be enabled on the display itself for this feature to work with the SW1900-HD.



---

Trade names for CEC are Anynet+ (Samsung), Aquos Link (Sharp), BRAVIA Link and BRAVIA Sync (Sony), HDMI-CEC (Hitachi), E-link (AOC), Kuro Link (Pioneer), INlink (Insignia), CE-Link and Regza Link (Toshiba), RIHD (Remote Interactive over HDMI) (Onkyo), RuncoLink (Runco International), SimpLink (LG), T-Link (ITT), HDAVI Control, EZ-Sync, VIERA Link (Panasonic), EasyLink (Philips), and NetCommand for HDMI (Mitsubishi).

---



If a user connects to the SW1900-HD, the SW1900-HD will automatically turn the display on. When the last person disconnects, the SW1900-HD will wait 30 seconds of inactivity then turn off the display. In many cases, this feature eliminates the need for television remotes, extends display life, saves power, and simplifies classrooms, conference rooms, and huddle spaces, making them more user friendly.

---

# Changes to the SW1900-HD

The SW1900-HD's RS-232 interface allows users and integrators the ability to control switching and change the behavior of the SW1900-HD. This section will describe the commands that are available and detail their affect on the system.

## RS232/DB9 Cable Pin-Out

See Page 7 for the RS-232 cable pin-out configuration.

Upon power up the following image will appear:

```
PS190 by Presentation Switchers
Firmware Revision 1.0

$
```

The "\$" indicates that the SW1900-HD is ready to receive a command. For a list of the available commands, type "HELP" and hit the return key.

```
PS190 by Presentation Switchers
Firmware Revision 1.0

$ HELP
SW1900-HD      Published Commands
-----
HELP          - This page.
ID            - Displays Device Identification
FRUN #        - Freerun Mode (0 = Disable, 1 = Enable)
ASW           - Displays Auto-Switch Feature Status.
ASW #         - Selects Auto-Switch (0=Off, 1=On).
SW            - Displays currently selected input being displayed.
SW #          - Selects input '#' (1-5) to be displayed.
RES           - Displays EDID output resolution.
RES #         - Selects output resolution from table (1-7), 1=1080p
MUTE #        - Mutes Audio Output (0=Unmute, 1=Mute)
VOL           - Displays Volume Level
VOL #         - Set Volume Level (1-100)
+             - Increase Volume by 1 Step (1-100)
-             - Decreases Volume by 1 Step (1-100)
LIN           - Displays Line Input Volume Level (1-100)
LIN #         - Changes Line In Level (1-100)
TRIM          - Displays all TRIM Settings
TRIM # #      - Sets Selected Input (#) to TRIM Setting (#)
DBG #         - Sets Devices to Debug Mode
TV #          - Uses CEC to control Display (0=Off, 1=On)
CEC #         - Turns CEC On/Off (0=Off, 1=On)
```

## Making a Switch / Selecting an Input to Display

The most basic capability of the SW1900-HD is routing signals from “Input Ports” to the “Output Port”. This process is often called “switching”. To do this with the SW1900-HD, use the SW command:

```
PS190 by Presentation Switchers  
Firmware Revision 1.0  
  
$ SW 3  
SW 3
```

In the example above, the audio and video from the device connected on Input 3 will be routed to the display. Audio from this device will be heard on the display as well as the stereo audio output port.

To obtain the current input, simply type “SW” and a carriage return.

## Adjust Volume

To change the volume level on the Stereo Line Output:

```
PS190 by Presentation Switchers  
Firmware Revision 1.0  
  
$ VOL 85  
VOL 85
```

The VOL command above is being changed to 85. The default audio level from the factory is 70 so a level of 85 is raising the volume level substantially.

Incremental volume adjustments can be achieved by typing “+” or “-” without hitting a carriage return.

To mute the audio, type “MUTE 1”. “MUTE 0” unmutes.



The VOL, MUTE, +, and - only affect the Stereo Line Output. Volume levels on the HDMI display can only be changed by adjusting the volume on the display itself.

## Input Device Gain Adjustments

Consumer and professional devices often differ in the volume levels. A gain adjustment is used to “trim” devices that are too loud so that all devices have the same relative volume. When switching between the devices there should be no noticeable volume difference between each input. All inputs are defaulted to a trim level of 100. To trim one input, use the trim feature to reduce the trim level to something less than 100. Here is an example:

```
SW1900-HD by Presentation Switchers  
Firmware Revision 1.0
```

```
$ TRIM 3 85  
TRIM 3 85  
$ TRIM  
TRIM 1 100  
TRIM 2 100  
TRIM 3 85  
TRIM 4 100  
TRIM 5 100
```

In this example, we first change the trim level on Input 3 to be a level of 85. Entering “TRIM” and a carriage return will display the trim levels of all inputs. In this case, we can see that the trim level for Input 3 has been set to 85.

## Audio Line Input Mix

To change the relative mix or audio level of the line input in relation to the HDMI extracted audio, use the LIN command. For example:

```
SW1900-HD by Presentation Switchers  
Firmware Revision 1.0
```

```
$ LIN 80  
LIN 80
```

In this example, stereo line input’s volume level is increased (from the default value of 70) in relation to the audio extracted from the current HDMI input selected. Installations which use this feature for a teacher microphone may want their voice louder.

A LIN value of zero will effectively mute the stereo line input and not affect the loudness of the HDMI input selected.

Type “LIN” and carriage return to obtain the current LIN value.

## Change Display Resolution

Most input devices send a request to the display to get its native resolution. The response from the display arrives in a data packet called the Extended Display Identification Data (EDID). The input device then adjusts its output resolution to match the resolution of the display.

The SW1900-HD has the ability to intercept the input device’s request for display information and respond with a user defined resolution. The command to specify this resolution is the RES command and below is a list of RES settings:

EDID Table Settings	
RES Value	Resolution / Behavior
0	Pass Through Mode
1	1080p @ 60Hz
2	720p @ 60Hz
3	1920 x 1200 @ 60Hz
4	1600 x 1200 @ 60Hz
5	1280 x 1024 @ 60Hz
6	1280 x 768 @ 60Hz
7	1024 x 768 @ 60Hz

Here is an example:

```
SW1900-HD by Presentation Switchers
Firmware Revision 1.0

$ RES 2
RES 2
```

In the example above, the EDID is modified to indicate the preferred resolution of this display is 720p. The SW1900-HD will send out a refresh request to all inputs to read the latest display information. Unless resolutions have been overridden by the end user, input devices will automatically change their output resolution to match the new resolution.

To view the current resolution setting, type “RES” and a carriage return.

## Auto-Switch On / Off

By default, auto-switch is always enabled. Here is how to control this feature:

```
SW1900-HD by Presentation Switchers
Firmware Revision 1.0

$ ASW 0
ASW 0
```

By typing “ASW 0”, the auto-switching feature is disabled. From this point, the only way to make a switch is by using the SW command. “ASW 1” will enable the feature.

Type “ASW” and carriage return to view the current state of the auto-switch feature.

## Display Control

As stated in more detail on Page 8, the display control feature is used to automatically turn on a display when beginning a presentation, then turn off the display when the presentation concludes.

By default, display control is always enabled. Here is how to control this feature:

```
SW1900-HD by Presentation Switchers  
Firmware Revision 1.0  
  
$ CEC 0  
CEC 0
```

In the example above, typing “CEC 0” and carriage return will turn off the display control feature. “CEC 1” and carriage return will enable the feature.

Type “CEC” and carriage return to obtain the current state of the auto-switch feature.



---

Note: This feature requires that CEC is enabled on the display device. See the detailed discussion on Page 8 regarding this feature and manufacturer trade names of CEC.

---

## Display On / Off

Similar to the automatic display control, the SW1900-HD can manually tell the display to turn on and off. Here is an example of how this feature works:

```
SW1900-HD by Presentation Switchers  
Firmware Revision 1.0  
  
$ TV 0  
TV 0
```

In the example above, “TV 0” with a carriage return will shut off the display. Typing a “TV 1” and carriage return will turn the display on.

Type “TV” and carriage return to view the current state of the display’s power status.



---

Note: This feature requires that CEC is enabled on the display device. See the detailed discussion on Page 8 regarding this feature and manufacturer trade names of CEC.

---

## Freerun On / Off

Freerun is a term to describe what happens when one selects an input that doesn’t have a

device connected or when one selects an input that has a device connected but the device isn't sending video.

When freerun is enabled (on) a blue screen displays at a fixed resolution of 480p (a resolution that is required by all HDMI display devices per the HDMI standard). When freerun is disabled the display will receive a disconnected signal (no signal present).

By default, freerun is enabled. To disable:

```
SW1900-HD by Presentation Switchers  
Firmware Revision 1.0  
  
$ FRUN 0  
FRUN 0
```

In the example above, "FRUN 0" with a carriage return will shut off the freerun feature. Typing a "FRUN 1" and carriage return will turn the freerun feature on.

Type "FRUN" and carriage return to view the current state of the freerun feature.

## Trademark Information

Presentation Switchers, SP Controls, the “PS Box” logo or icon, and the names and marks associated with SP Controls’ and Presentation Switchers’ products are trademarks and/or service marks of Presentation Switchers, Inc. & SP Controls, Inc., and are registered and/or common-law marks in the United States and various other countries.

All other trademarks are the property of their respective owners.

## Patent Information

The accompanying product is protected by one or more U.S. and foreign patents and/or pending patent applications held by Presentation Switchers.

## Customer Feedback

We are constantly working to improve the quality of our documentation, and we would appreciate your feedback. Please send email to [sales@spcontrols.com](mailto:sales@spcontrols.com).

© 2020 Presentation Switchers, Inc. & SP Controls, Inc. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of SP Controls, Inc. & Presentation Switchers, Inc.

Under the law, reproducing includes translating into another language or format. As between the parties, Presentation Switchers, Inc. retains title to and ownership of all proprietary rights with respect to the software contained within its products. The software is protected by United States copyright laws and international treaty provision. Therefore, you must treat the software like any other copyrighted material (e.g., a book or sound recording).

Every effort has been made to ensure that the information in this manual is accurate. SP Controls, Inc. & Presentation Switchers, Inc. are not responsible for printing or clerical errors.

Presentation Switchers, Inc.  
2324 Cheney-Spokane Road  
Cheney, WA 99004 USA

[sales@pswitchers.com](mailto:sales@pswitchers.com)

SP Controls, Inc  
930 Linden Avenue  
South San Francisco, CA 94080 USA

[sales@SPcontrols.com](mailto:sales@SPcontrols.com)